

# Cylindrical Photoelectric Sensors



## BR Series PRODUCT MANUAL

**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

### Features

- Superior noise resistance with digital signal processing
- High-speed response time under 1ms
- Built-in reverse power protection circuit and output short overcurrent protection circuit
- Suitable for sensing in narrow space (narrow beam type)
- External sensitivity adjustment
- Light ON/Dark ON mode selectable by control wire
- IP66 protection rating (IEC standard)

### Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

**⚠ Warning** Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power apparatus, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**  
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**  
Failure to follow this instruction may result in explosion or fire.
- 03. Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**  
Failure to follow this instruction may result in fire.
- 05. Check 'Connections' before wiring.**  
Failure to follow this instruction may result in fire.

**⚠ Caution** Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**  
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**  
Failure to follow this instruction may result in fire.

### Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.  
When using a separate power supply for the sensor and load, supply power to the sensor first.
- 12-24 VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

### Product Components

- Product
- M18 fixing nut × 2
- Washer (metal material model)
- Instruction manual
- Adjustment screwdriver

## Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

**BR** ① **200** - **DD TN** - ② - ③

### ① Material

No mark: Metal  
P: Plastic

### ③ Control output

No mark: NPN open collector output  
P: PNP open collector output

### ② Connection

No mark: Cable type  
C: Connector type


## Sold Separately

- Connector cable, connector connection cable

## Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
  - Installation environment and background (reflected light)
  - Sensing distance and sensing target
  - Direction of target's movement
  - Feature data
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 14.7 N m (metal material model), 0.39 N m (plastic material model). In case of the connector type, tightening torque for connector is from 0.39 to 0.49 N m.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

### Reflective

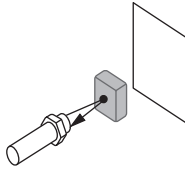

Sensor - Sensing target:  
Install to face each other (parallel with the sensing side of the unit)


## Operation Timing Chart

Operation mode	Light ON	Dark ON
<b>Received light</b>	Received Interrupted	Received Interrupted
<b>Operation indicator (red)</b>	ON OFF	ON OFF
<b>Transistor output</b>	ON OFF	ON OFF


- For preventing the malfunction, the transistor output maintains OFF state for 5 sec after power-on.

## Connections

### ■ Cable type

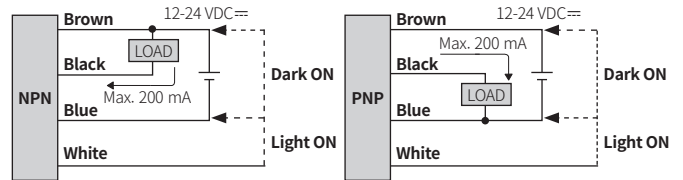

### ■ Connector type

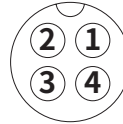

Pin	Color	Function
①	Brown	+V
②	White	CONTROL
③	Blue	0 V
④	Black	OUT


### ■ Operation mode selection

△ Be sure to connect the control wire when selecting the operation mode. Failure to this instruction may result in product damage.


Operation mode	Wiring
Dark ON	Connect the control wire (white) to +V (brown)
Light ON	Connect the control wire (white) to 0 V (blue)

## Circuit

### ■ NPN open collector output

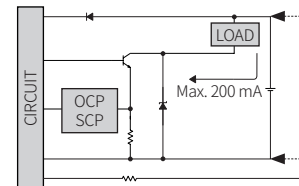

### ■ PNP open collector output

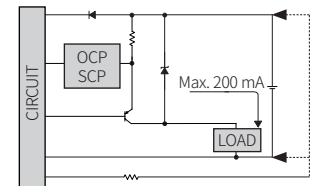

- OCP (over current protection), SCP (short circuit protection)
- If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

## Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.


STEP	Status	Description
01	Received	Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area.
02	Interrupted	Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B).
03	-	Set the adjuster at the mid position between (A) and (B) for optimal sensitivity.

## Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

<b>A</b>	Lens	<b>C</b>	Sensitivity adjuster
<b>B</b>	Operation indicator (red)		


### ■ Metal material model

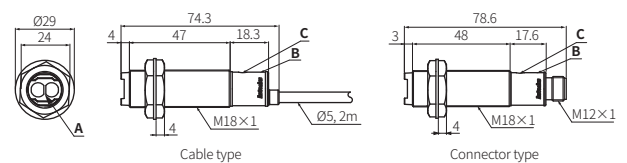


### ■ Plastic material model

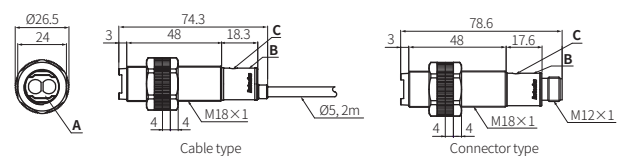

■ M18 fixing nut



■ Washer



Specifications

Model	BR□200-DDTN-□-□
Sensing type	Narrow beam reflective
Sensing distance	200 mm <sup>01)</sup>
Sensing target	Opaque materials, translucent materials
Hysteresis	≤ 20 % of sensing distance
Response time	≤ 1 ms
Light source	Infrared
Peak emission wavelength	850 nm
Sensitivity adjustment	YES (Adjuster)
Operation mode	Light ON mode - Dark ON mode selectable (Control wire)
Indicator	Operation indicator (red)
Approval	CE


01) Non-glossy white paper 100 × 100 mm

Unit weight (packaged)	Metal material model	Plastic material model
Cable type	≈ 120 g (≈ 160 g)	≈ 100 g (≈ 140 g)
Connector type	≈ 50 g (≈ 90 g)	≈ 30 g (≈ 70 g)

Power supply	12-24 VDC≒ ±10 % (ripple P-P: ≤ 10 %)
Current consumption	≤ 45 mA
Control output	NPN open collector output / PNP open collector output model
Load voltage	≤ 30 VDC≒
Load current	≤ 200 mA
Residual voltage	NPN: ≤ 1 VDC≒, PNP: ≤ 2.5 VDC≒
Protection circuit	Reverse power protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC≒ megger)
Noise immunity	±240 VDC≒ the square wave noise (pulse width: 1 μs) by the noise simulator
Dielectric strength	1,000 VAC~ 50/60 Hz for 1 min
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours
Shock	500 m/s <sup>2</sup> (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient illuminance (receiver)	Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx
Ambient temperature	-10 to 60 °C, storage: -25 to 75 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection rating	IP66 (IEC standard)
Connection	Cable type / Connector type model
Cable spec.	Ø 5 mm, 4-wire, 2 m
Wire spec.	AWG22 (0.08 mm, 60-core), insulator outer diameter: Ø 1.25 mm
Connector	M12 4-pin plug type
Material	Case: Brass, Ni-plate (metal material model) or PA Black (plastic material model), sensing part: PC lens

Feature Data

■ Sensing area

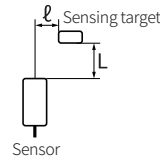

• BRP200-DDTN

