Autonics

Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.

• Δ symbol indicates caution due to special circumstances in which hazards may occur.

Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc). Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
- Failure to follow this instruction may result in explosion or fire. **03. Do not disassemble or modify the unit.** Failure to follow this instruction may result in fire or electric shock.
- ▲ Caution Failure to follow instructions may result in injury or product damage.

01. Do not apply beyond rated pressure.

Safety Considerations

- Failure to follow this instruction may result in product damage. 02. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- 03. Fix the cable through the cable connection part and do not turn the cable of the unit.

Failure to follow this instruction may result in product damage.

- 04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.
- Failure to follow this instruction may result in fire or product damage. **05. Check 'Connections' before wiring.**
- Failure to follow this instruction may result in explosion or fire.06. This product is designed to detect the pressure of noncorrosive medium. Do not use for corrosive medium.
- Failure to follow this instruction may result in product damage.
- **07. Use a dry cloth to clean the unit, and do not use water or organic solvent.** Failure to follow this instruction may result in fire or electric shock.

Cautions during Use

- Follow instructions in 'Cautions during Use'.
- Otherwise, it may cause unexpected accidents. • Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- When installing the unit on pipe line, use the hexagon part of connections not to turn the unit with a pipe wrench. Do not use the unit with strong vibrations.
- Store the unit at the place without moisture, dust, and vibration.
- This product is not needed to take maintenance because there is no moving part. But it needs to take maintenance once a year as below instructions even though inside of pressure pipe is normally clean.
- 1. Check the broken status of outside.
- 2. Check the pressure slot, cleanliness inside, and corrosion state.
- 3. Short each terminal and check the insulation resistance between the case and power.

Non-Indicating Pressure Transmitters



TPS20 Series PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc are subject to change without notice for product improvement Some models may be discontinued without notice.

Features

- Excellent corrosion resistance with stainless steel housing
- High accuracy $\pm 0.3\%$ F.S.
- Various connection method
- Head type, DIN connector type, connector cable type
- Various user friendly function
- Built-in zero-point, span adjustment (head type)

- When removing a sensor for maintenance, follow the below instructions. 1. Replace an O-ring which is used once.
- 2. Be sure that diaphragm part is not damaged.
- Switch or circuit breaker should be installed nearby users for convenient control.
- The unit cannot be repaired due to disassembled structure.
- The unit is fixed with bolt and nut at the both sides of case. Do not press excessive load (pprox $300~{\rm kg/cm^2}),$ or it may cause damage to the unit.
- This unit may be used in the following environments.
- Indoor / Outdoor (in the environment condition rated in 'Specifications') - Altitude max. 2,000 m
- Pollution degree 2
- Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website .

TPS20 -	0	2	ß	4	(6)
• Pressure type		4	Pressure	e port	
G: Gauge pressure		F8	: G3/8 (sta	andard, P	F)
A: Absolute pressure		P2	: R1/2 (wi	th adapte	er, PT)
		P8	: R3/8 (wi	th adapte	er, PT)
Connection		ZZ	: Others		
1: Head type					
2: DIN connector type		G	User pre	ssure ra	nge ⁰¹⁾

Customized pressure range

r type 3. Connector cable type

Rated Pressure range

Gauge pressure Absolute pressure			
Number: rated pressure range (unit: kgf/cm ²)			

0.1	
0 to 0.2	
0 to 0.5	=
0 to 1	0 to 1
0 to 2	0 to 2
0 to 7	0 to 7
0 to 10	0 to 10
0 to 20	0 to 20
0 to 35	0 to 35
0 to 70	
0 to 100	
0 to 200	
0 to 300	
0 to 350	
mpound pressure	
-1.03 to 0] =
-1.03 to 1	
-1.03 to 7	
-1.03 to 10	
-1.03 to 20	
-1.03 to 35	
	0 to 0.5 0 to 1 0 to 2 0 to 7 0 to 10 0 to 20 0 to 35 0 to 70 0 to 100 0 to 350 0 to 350 mpound pressure -1.03 to 0 -1.03 to 1 -1.03 to 1 -1.03 to 10 -1.03 to 10 -1.03 to 10 -1.03 to 10 -1.03 to 20

01) The pressure range is set to customized pressure range. (select 'Z' at ③ Rated pressure range)

Instruction manual

Product Components

• Product


Sold Separately

• M12 Connector cable: C D3-2 / C D3-5

Connections Head type DIN connector type Connector cable type Pin Pin Type Pin Type OZERO O^2 0 ÓÐ 2 N.C ر ۵ \oplus 2 N.C 3 F.G. 0 (-) F.G. 4 ØØ

• In case of head type, remove the top cover.


Inner Circuit

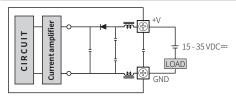

Dimensions

• Unit: mm, For the detailed drawings, follow the Autonics website.

Head type

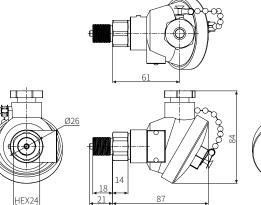



46.5


DIN connector type







da di tadi di

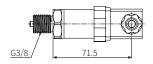


37.3

81

8

Connector cable type

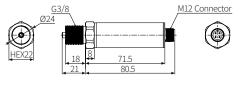

Specifications

Series	TPS20			
Applicable medium	Gas, liquid, fluid (except corrosive environment of SUS316)			
Pressure Type	Gauge pressure Absolute pressure Compound pre			
Rated Pressure range ⁰¹⁾			-1.03 to 0, 35 kgf / cm ² (different by model)	
Max. pressure	300 % of max. rated pressure			
Response time	\leq 100 ms			
Protection circuit	Reverse polarity protection circuit			
Tightening torque	≥ Industrial plug 5 N			
Material	Sealing: SUS316, O-ring: fluoro rubber, diaphragm: SUS316, connection: SUS316			
Connection	+,-			
Case structure	Drip-proof structure			
Certification	C e 紧			
Unit weight (packaged)	$\approx 320 \text{ g} (\approx 350 \text{ g})$, based on head type			

 Unit weight (packaged)
 ≈ 320 g (≈ 350 g), based on head to

 01) It is different by model. Refer to 'Ordering Information'.

Power supply	15-35 VDC=			
Allowable voltage range	90 to 110% of rated voltage			
Current consumption	\leq 50 mA			
Current Output	DC 4 - 20 mA			
Linearity	\pm 0.3 % F.S. (-10 to 50 °C), \pm 0.5 % F.S. (50 to 70 °C)			
Hysteresis	± 0.3 % F.S.			
Temp. Zero Shift	± 0.03 % F.S.			
Temp. Span Shift	± 0.03 % F.S. (at 25 °C)			
Load resistance	\leq 600 Ω			
Insulation resistance	\geq 100 M Ω (500 VDC== megger)			
Dielectric strength	Between the charging part and the case: 500 VAC ~ 50 / 60 Hz for 1 minute			
Vibration	1.5 mm amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours			
Shock	95 m/s ²			
Ambient temperature	-10 to 70 °C, storage: -10 to 70 °C (no freezing or condensation)			
Ambient humidity	5 to 95% RH, storage: 5 to 95% RH (no freezing or condensation)			

Sold Separately: M12 Connector Cable

• For detailed information, refer to the 'M8/M12 Connector Cable' manual.

Appearance	Power	Connector 1	Connector 2	Length	Feature	Model
~~~~	DC	M12 (Socket-	3-wire	2 m	PVC	CID3-2
DC	DC	Female) 4-pin		5 m		CID3-5
		M12 (Socket-	2	2 m	DVC	CLD3-2
DC Female) 4-pin, L type	3-wire	5 m	PVC	CLD3-5		

#### Pressure Conversion Table

	Ра	kgf/cm ²	mmHg	mmH₂O	psi	bar	inHg
Ра	1	0.000010197	0.007501	0.101972	0.00014504	0.00001	0.0002953
kgf/cm ²	98066.5	1	735.5592	10000.0005	14.223393	0.980665	28.959025
mmHg	133.3224	0.001359	1	13.595099	0.019337	0.001333	0.039370
mmH ₂ O	9.80665	0.000099	0.073556	1	0.00142	0.000098	0.002896
psi	6894.733	0.070307	51.71475	703.016716	1	0.068947	2.036014
bar	100000.0	1.019716	750.062	10197.1626	14.503824	1	29.529988
inHg	3386.388	0.034532	25.40022	345.315507	0.491156	0.033864	1

• 1,000,000 Pa = 1,000 kPa = 1 MPa

# Troubleshooting

Fault	Troubleshooting
No outputs	Check the power supply. Check the polarity (+, -) when wiring cable. Check the connection part.
Abnormally fluctuating output	Check the power supply. Check the supplied pressure. Check the pressure line.
Out of zero point output value	Check the power supply. Check the load resistive value of current output type for a receiver is over 600 $\Omega$ . Check the measuring point and transmission distance. Check the line resistance is below 600 $\Omega$ .